

1




Turn the Dispenser off.


2

Remove one Hopper and Accumulator at a time.

Accumulator

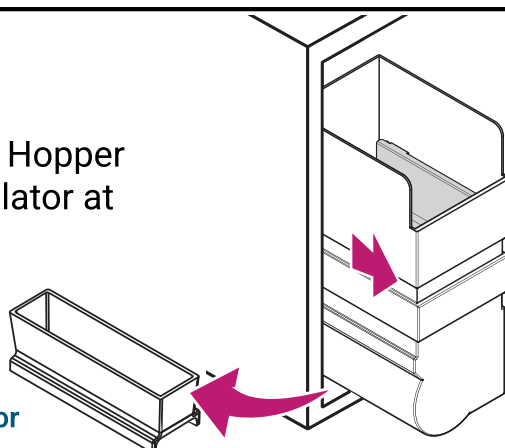

3

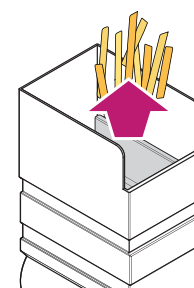

Dispose of unused fries or return to freezer per SOP.

Repeat for 2nd Hopper.

⚠ IMPORTANT! The Drum will fall out when the hopper is inverted!

4


Diverter

Take Hoppers and Accumulators to the wash area. Remove Drum and Diverter and HAND WASH all parts separately.

⚠ IMPORTANT! Parts are not dishwasher safe

- Clean with hot solution of detergent and water.
- Rinse with clear water.
- Sanitize.
- Wait until Dispenser has been defrosted and cleaned before replacing back inside.

5

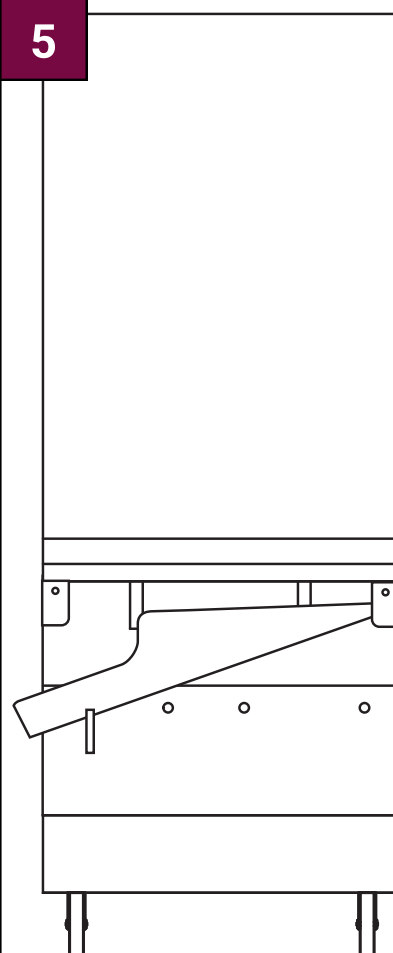

Clean Dispenser:

- Wipe down exterior surfaces with soap and water.
- Wipe down (rinse) with clear water.
- Wipe ALL interior surfaces dry!

⚠ Dispenser be completely defrosted daily before cleaning

⚠ DO NOT spray the exterior with liquid or solvents!

Note: Use towels to soak up water on the bottom.

⚠ IMPORTANT! Failure to defrost and dry completely EACH DAY will cause malfunction and make cleaning harder.


6

Leave door open. Allow interior to defrost.

Remove front clear barrier and clean with soap and water.

AFTER interior is defrosted, remove, clean and dry chute.

Place pan under chute to catch runoff while defrosting.

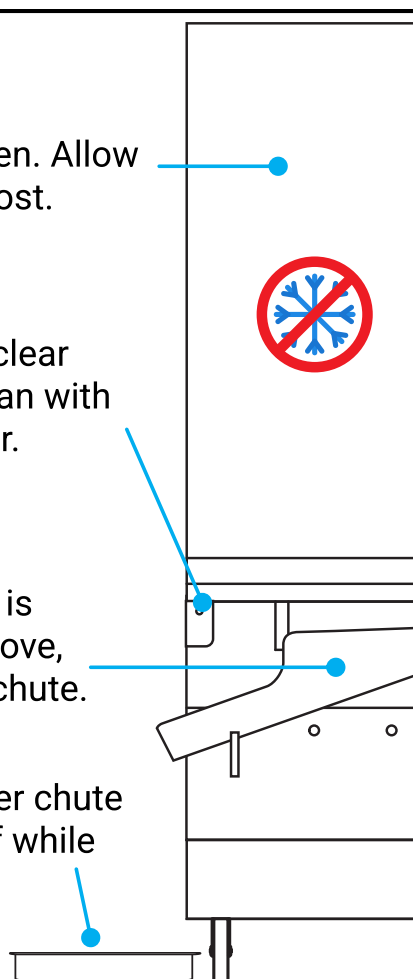

7



Be certain that all food debris has been removed before replacing the Accumulator.



Weekly: Rubber Flaps & Dispenser Doors



- Pull out to remove
- HAND WASH with hot detergent & water solution.
- Rinse with clear water and sanitize.
- Allow to air dry.
- Wipe both sides of Dispenser Doors.
- Rinse and sanitize.
- Insert flaps:
 - Make sure the right side is up.
 - Flap axle fits into slot
 - Flaps can go on left or right side