

MISO — FLIPPY NEXT GEN CLEANING PROCEDURE



**Guardian®
Pot & Pan
Detergent**



**Super San® Food
Service Sanitizer**




**Inside Out®
Heavy Duty
Degreaser**



**Peroxide®
Multi-Surface Cleaner
and Disinfectant**

DAILY:

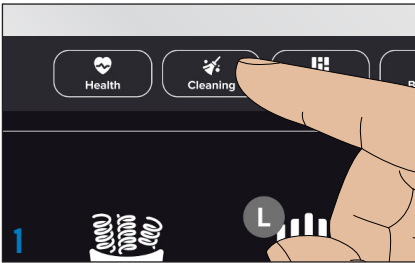


1

- Activate "Cleaning Mode" on Flippy display and wait for the machine position itself for cleaning.

NOTE: Display will alert user when cleaning is ready to be performed.


—You will select the "Cleaning" icon from the home screen. Then you will select what type of cleaning you want to do:
Quick, Deep or Dispenser Only

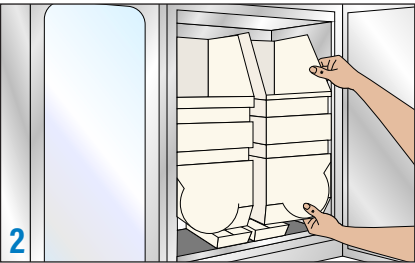

2


- Open the dispenser — remove and empty each food bin.
- Turn OFF and allow dispenser to thaw. Leave the door OPEN.

NOTE: Full thawing will take approximately 1 hour. Never use sharp objects to remove frost buildup.




3

- Remove the following dispenser components. Take back to sink/dish machine and wash, rinse, sanitize items:
 - Dispenser hoppers
 - Drums
 - Hopper diverters
 - Portion bins
 - Flap door
 - Dispenser Chute
 - Dispenser spill tray
- Allow to air dry.




4

- Remove the following machine components. Take back to sink/dish machine and wash, rinse, sanitize items:
 - Autobasket drip pan
 - Fryer shelf racks
 - Elevator bin
 - Elevator catch pan
 - Hot hold chute
 - Hot hold catch pan
- Allow to air dry.

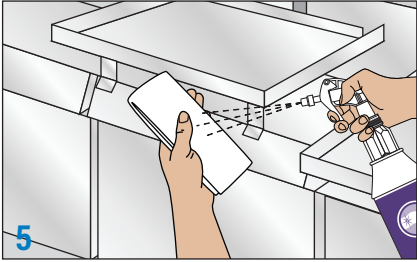

5


- Spray disposable towel with degreaser solution and wipe fryer shelves, fryer and basket markers and any soiled parts of machine and frame including autobasket rack drawers, handles, panel area, elevator carriage, and fryer localization.

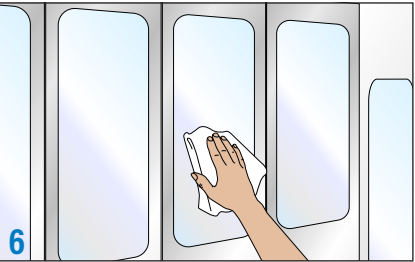

6


- Spray soft microfiber or cloth towel with approved multi-surface cleaner and disinfectant and wipe plexiglass.

NOTE: Using brown paper towels will scratch plexiglass. If heavier soil persists, use approved degreaser to wipe plexiglass.

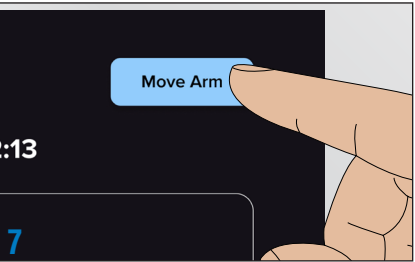

7


- Close barriers, release E-stop, and press "MOVE ARM" on display. Arm will move to other side of the machine. Open barrier and repeat step 7 on previously blocked plexiglass.

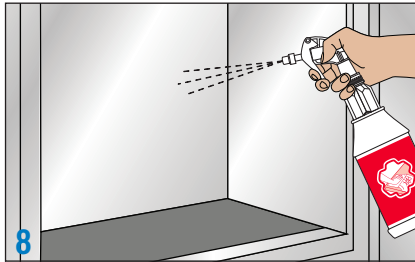

8

- Use a disposable cloth and sink detergent solution, wipe interior surface of food dispenser. Spray sanitizer solution onto interior dispenser surfaces. Allow to air dry.
- Reinstall all parts. Close barrier door and follow display prompts to return unit to service.


WEEKLY:

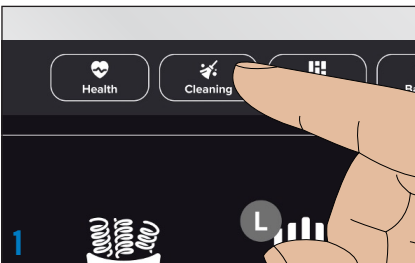

1

- Activate "Cleaning Mode" on Flippy display and wait for the machine position itself for cleaning.

—You will select the "Cleaning" icon from the home screen. Then you will select what type of cleaning you want to do:
Quick, Deep or Dispenser Only



2

- Remove Autobaskets to wash at least once per week.


CAUTION: Baskets may be hot.



3

- Spray multi-surface cleaner and disinfectant onto a soft microfiber or cloth towel and gently wipe touchscreen.

CAUTION: Do not accidentally press any buttons while wiping down.

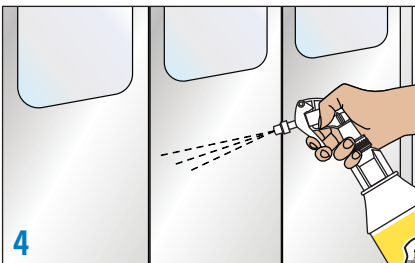

4

- Spray multi-surface cleaner and disinfectant directly onto the exterior surfaces of Flippy and use a microfiber or cloth towel to wipe exterior surfaces of Flippy.

NOTE: For tougher soils, a spray bottle solution of sink detergent or degreaser can be used.

CAUTION: NEVER use abrasive materials to wipe exterior.



5

- Apply multi-surface cleaner and disinfectant to disposable towel and wipe down arm sleeve.



6

- Spray disposable towel with degreaser solution and wipe robot arm gripper.
- Close barrier door and follow display to return unit to service.