


Status Light Colors

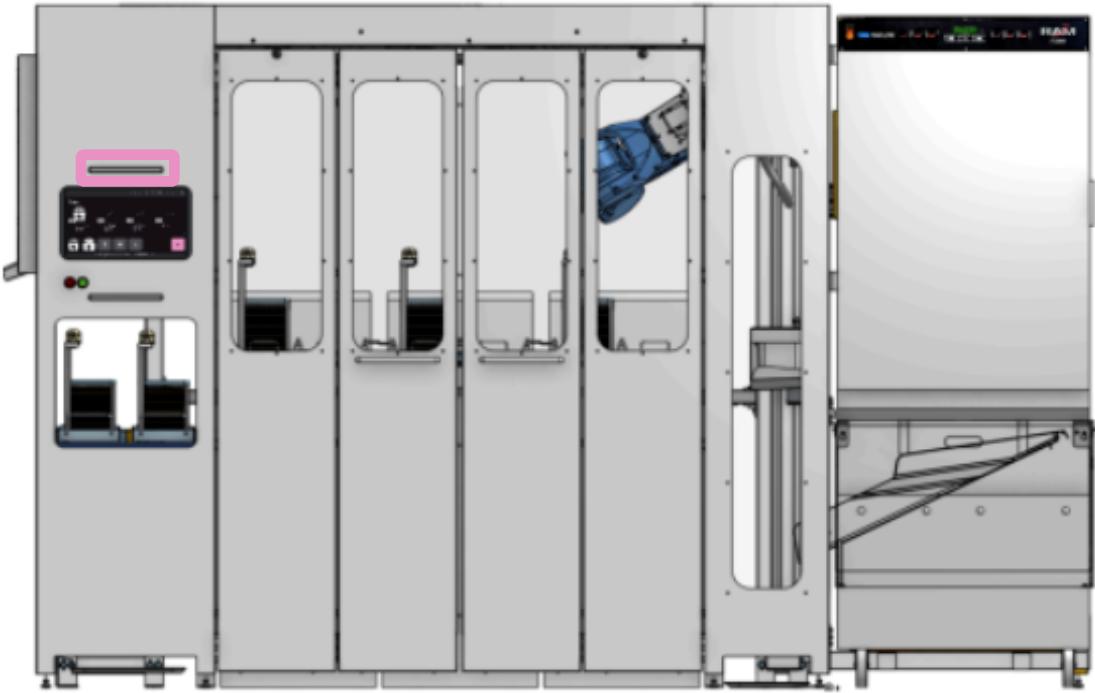

- Purple

Cooking
Flippy is available, ready, and/or cooking.
- Blue


Cleaning
Flippy is in cleaning mode.
- Yellow

Need's Assistance
Flippy needs assistance from crew to fix an issue.
- Red

Stopped
Flippy is in an emergency stop.
(ie. e-stop triggered, barrier opened)
- Red Breathing

Support Connected
Flippy is stopped and Miso Support is connected to Flippy

Autobasket Light Colors

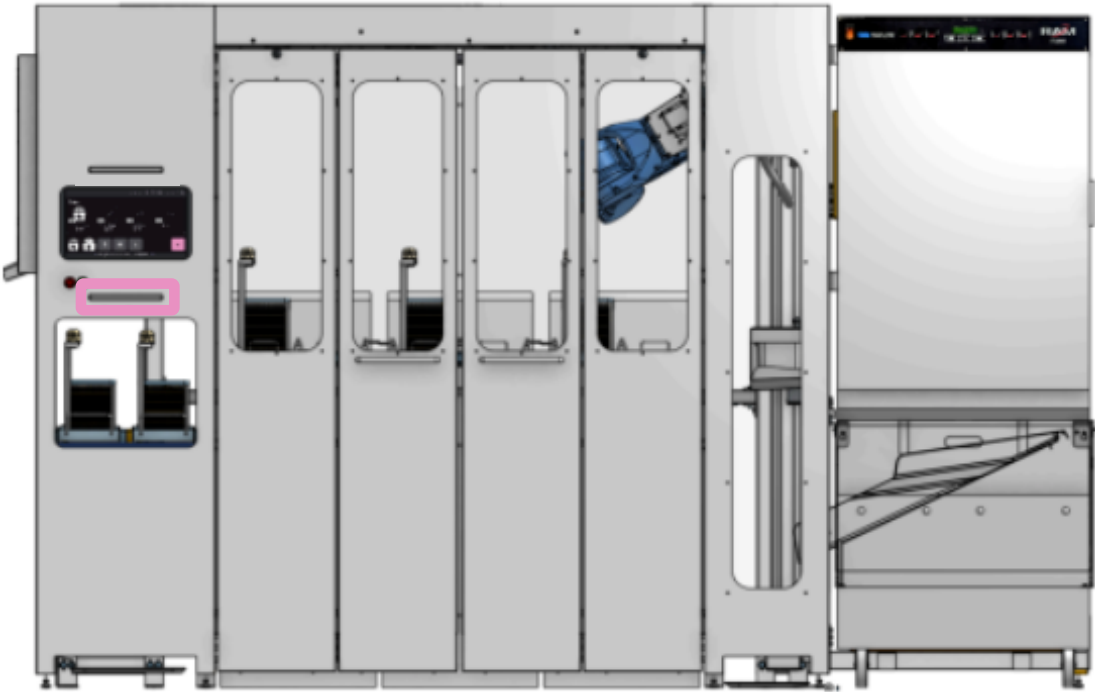

- White Solid

Slot available for use
- White Breathing

Drawer left open
- Green Solid

New food detected
- Orange Breathing

Cooked food in slot
- Orange Bouncing

Slot reserved for cooked food
- Yellow Solid

Issue with the basket in slot