



Tap on Start Flippy and wait for the Cooking Menu.

Drawers Button

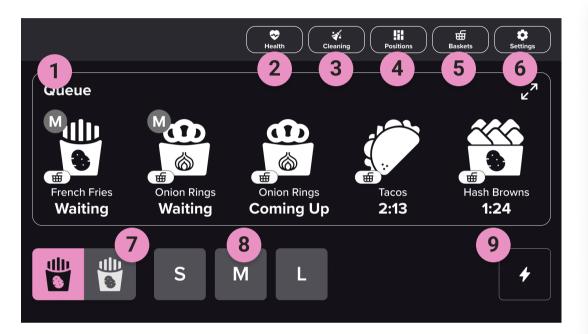

Cooking Queue
Settings Button
Health Button
Dispenser Food Select Buttons
Cleanning Button
Dispenser Order Buttons
Cooking Positions Button
Autobasket

Reading the Queue

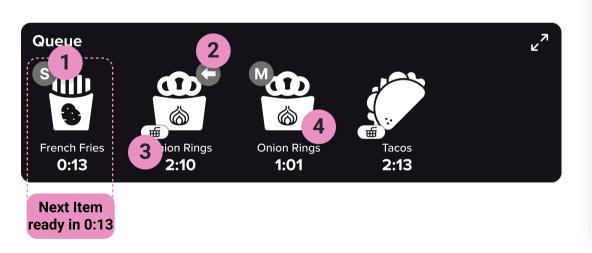

- Portion size (only populated for Dispenser orders)
- Icon to show food was PRIORITIZED (expedited)
- Planned cooked food destination (hot hold or autobasket)
- 4 Empty

The Queue works by always showing the item on the far left first

Flippy keeps track of all the pickup, cook, and drop-off times, so the food that will be ready first is always on the left

Even if you prioritize certain food, it might not move to the front of the line because it depends on how long each food takes to cook

For Example, if Flippy is cooking fries and you prioritize chicken, the fries will still be ready first since they cook faster, so they stay at the front of the queue