


Using the Touchscreen with Cooking


Dispenser

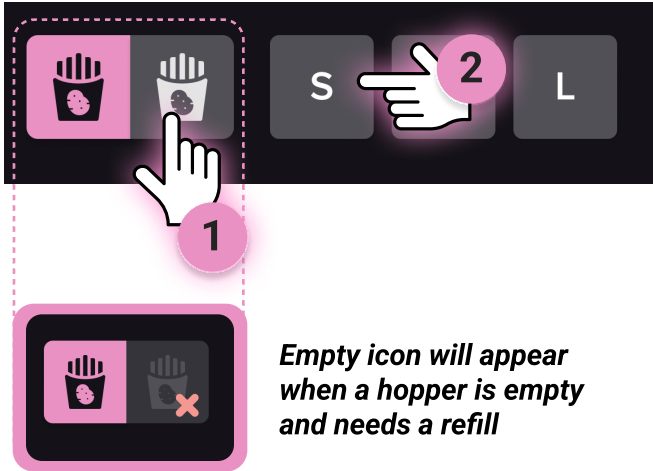

- | | |
|---|------------------------------|
| 1 | Select dispenser product |
| 2 | Tap the correct size button. |

Avoid Delays by keeping your hoppers full with the correct food items!


Autobasket

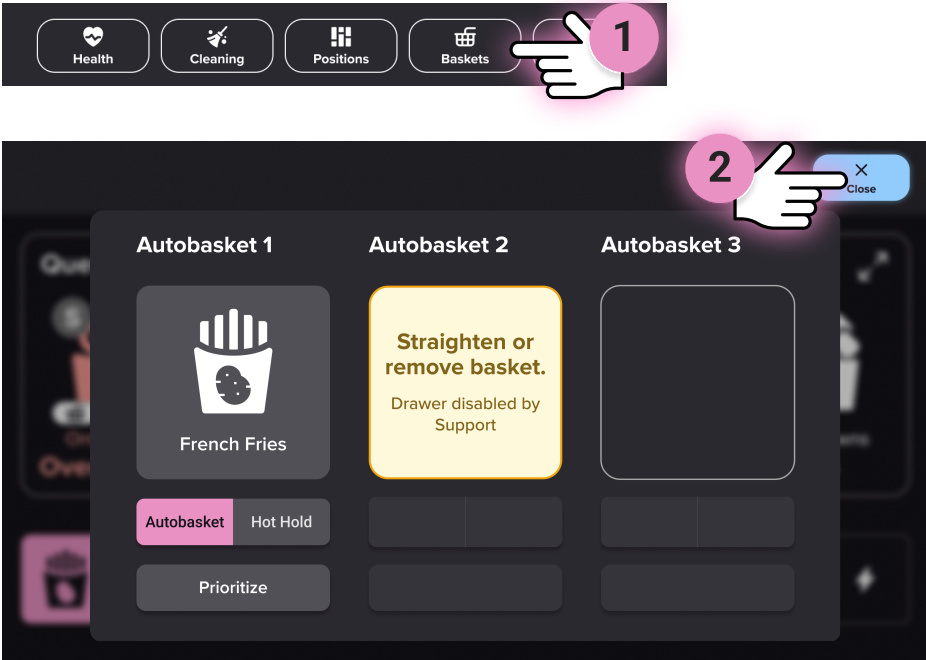

- | | |
|---|------------------------------|
| 1 | Select the Baskets button |
| 2 | Tap on the X button to close |

Flippy will display in the drawer if there's an error with an autobasket.

Cooking Preferences

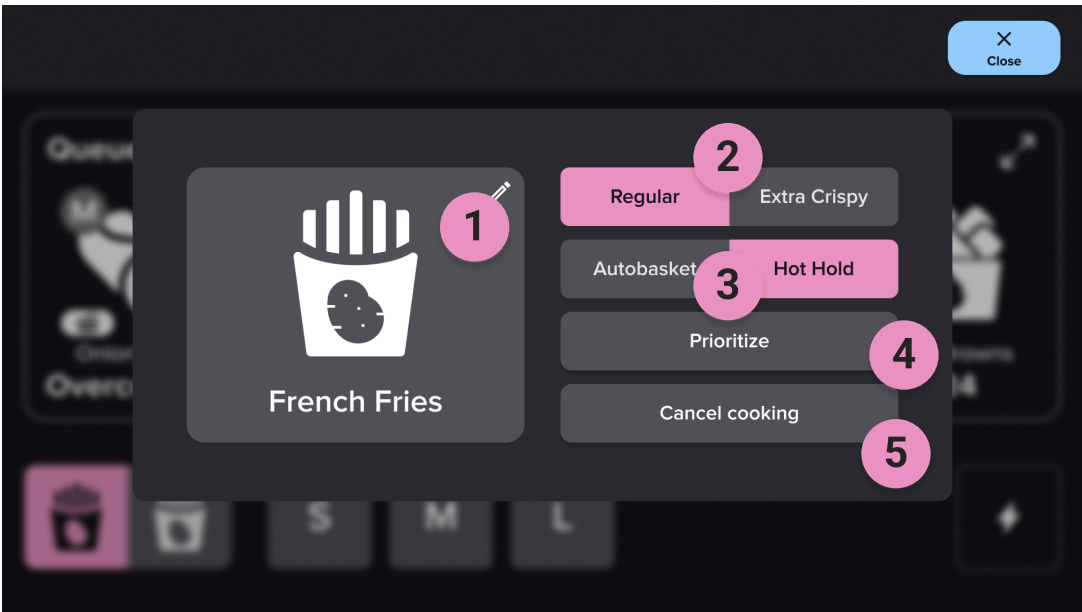

- 1 Change what food type is in a basket
- 2 Select the food drop off location
- 3 Change the doneness level of the food
- 4 Prioritize this order over other orders that have yet to start cooking
- 5 Cancel this order