





Turn on the Dispenser.

IMPORTANT!
Make sure that
all interior
surfaces are dry.

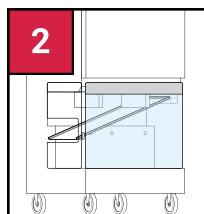


Remove clear
front barrier.

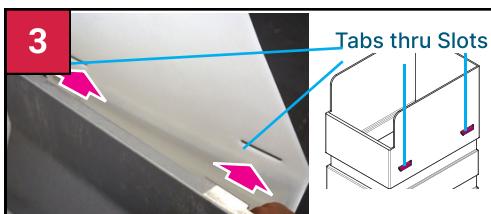


Insert the Diverter into the first Hopper.
Hook the two tabs into the slots on the
side of the Hopper so they are firmly
seated.

IMPORTANT! If tabs are loose, the
Dispenser will waste food.

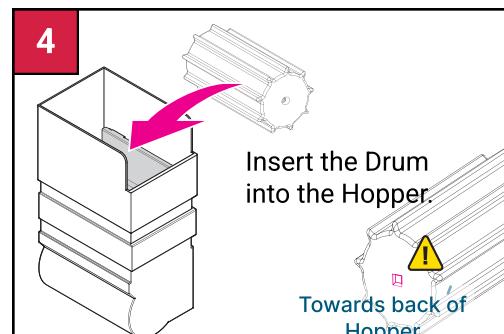

IMPORTANT! The square hole on the
drum goes to the back of the Hopper!

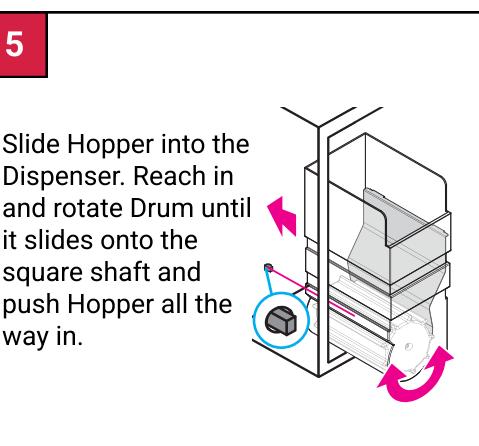


Slide Hopper into the
Dispenser. Reach in
and rotate Drum until
it slides onto the
square shaft and
push Hopper all the
way in.



Once temperature is 32°F or less, fill with food items such as Fries up to just
below lip on the front.


IMPORTANT! Ensure the food is loaded into the correct spaces according to
their arrangement (left- right) as shown on the touchscreen

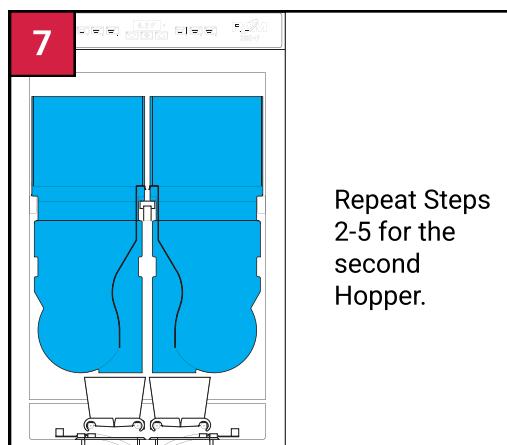


Repeat Steps
2-5 for the
second
Hopper.



Install the Dispenser Chute by
passing the bottom end through the
hole on the side barrier.

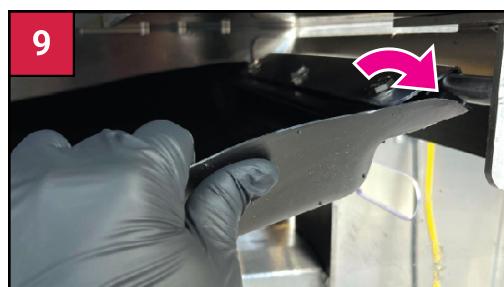

Hook the upper end onto the
support rail.

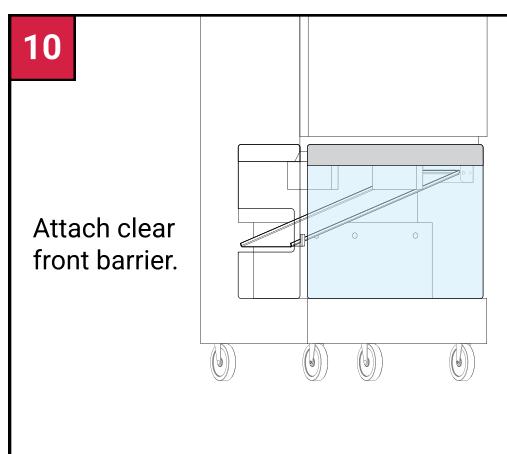

Attach clear
front barrier.



Fryers Dispenser
Make sure the Dispenser Catch Pan
is in place.


Scan this code for a
video demo






Prende el Dispensador

¡IMPORTANTE!
Verifica que las
superficies
interiores
esten secas.

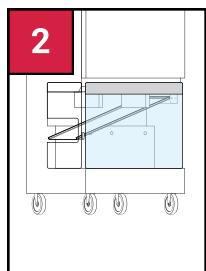


Retire la
barrera frontal
transparente.

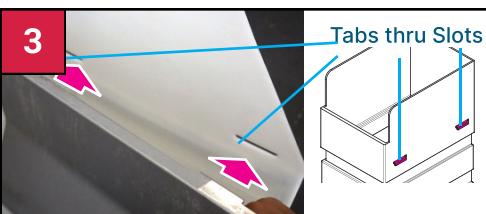

Inserta el Desviador en el primero Contenedor. Engancha los dos ganchos en las aberturas en el lado de el Contenedor y queden firmemente.


¡IMPORTANTE! Si los ganchos están sueltos, desperdiciará comida.

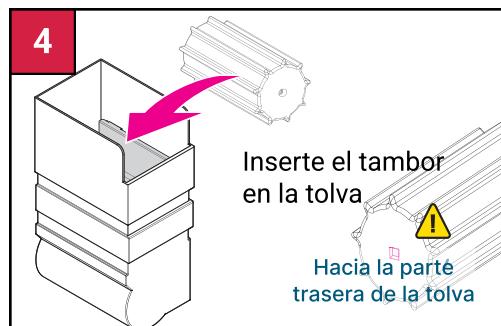

Inserte el tambor
en la tolva

Hacia la parte
trasera de la tolva

¡IMPORTANTE! El agujero cuadrado del tambor va a la parte trasera del deposito!

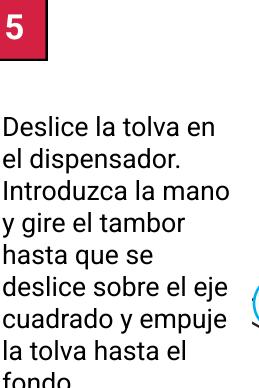


Deslice la tolva en
el dispensador.
Introduzca la mano
y gire el tambor
hasta que se
deslice sobre el eje
cuadrado y empuje
la tolva hasta el
fondo.



Una vez que la temperatura sea de 32 °F o menos, llene con alimentos como papas fritas hasta justo debajo del borde en la parte delantera.


¡IMPORTANTE! Asegúrese de que los alimentos se cargan en los espacios correctos según su disposición (izquierda-derecha) como se muestra en la pantalla táctil.

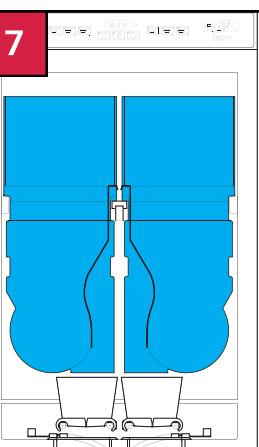


Repita los
pasos 2-5
para la
segunda
tolva.




Instale el canal del dispensador
pasando el extremo inferior por el
orificio de la barrera lateral.

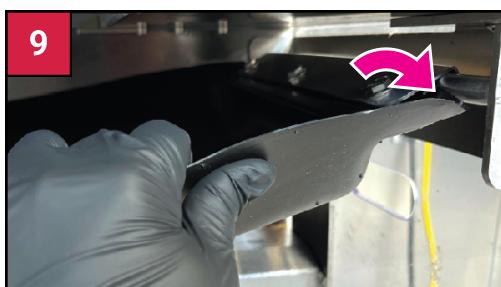

Enganche el extremo superior en el
riel de soporte.

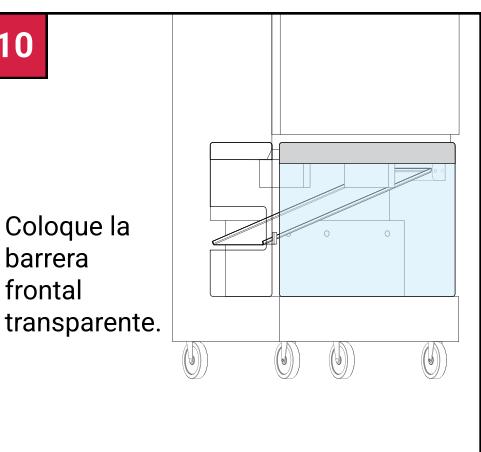

Coloque la
barrera
frontal
transparente.

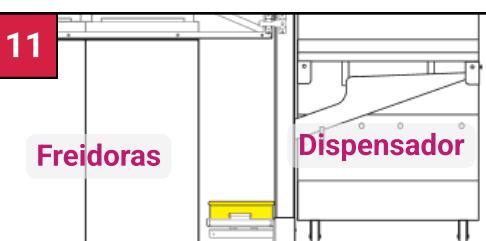

Asegúrese de que la bandeja de
recogida del dispensador está en
su sitio.

Escanea este código
para el vídeo de
demostración

