

Take Hoppers to the wash area. Remove Drum and Diverter and HAND WASH all parts separately.

Defrost daily to avoid blockages or errors

Daily – Clean in Sink

Clean separately in solution of hot water & detergent. Rinse with clear water. Sanitize.

Dispenser Interior Components
(see Dispenser Instruction Card)

- Dispenser Chute
- AutoBins
- Hot Hold Chute
- Fryer Baskets
- Dispenser Catch Pan
- AutoBin Catch Pan

Clear Barriers

Clean with water and detergent solution. DO NOT USE GLASS CLEANER.

Daily – Wipe Down

Wipe down with water & detergent solution. Rinse with clear water. Sanitize.

- Frame and Barriers
- Dispenser Exterior
- Specialty Basket Area
- Basket Markers

Do not use abrasive materials or cleaners!



Robotic Arm Sleeve


DAILY – Wipe down with water & detergent solution. Spray with sanitizing surface spray

Tablet


AS NEEDED
Use ONLY supplied wipes and cleaning cloth.


Fryers & Hot Hold

Clean according to your location's SOP.

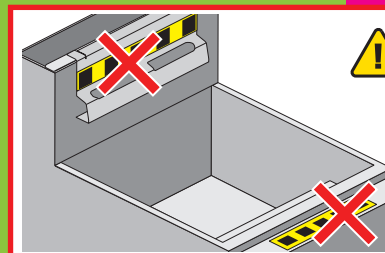

IMPORTANT! Do not use any abrasives on the fryer or basket markers!

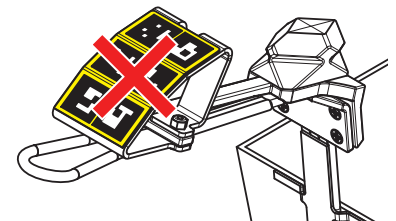

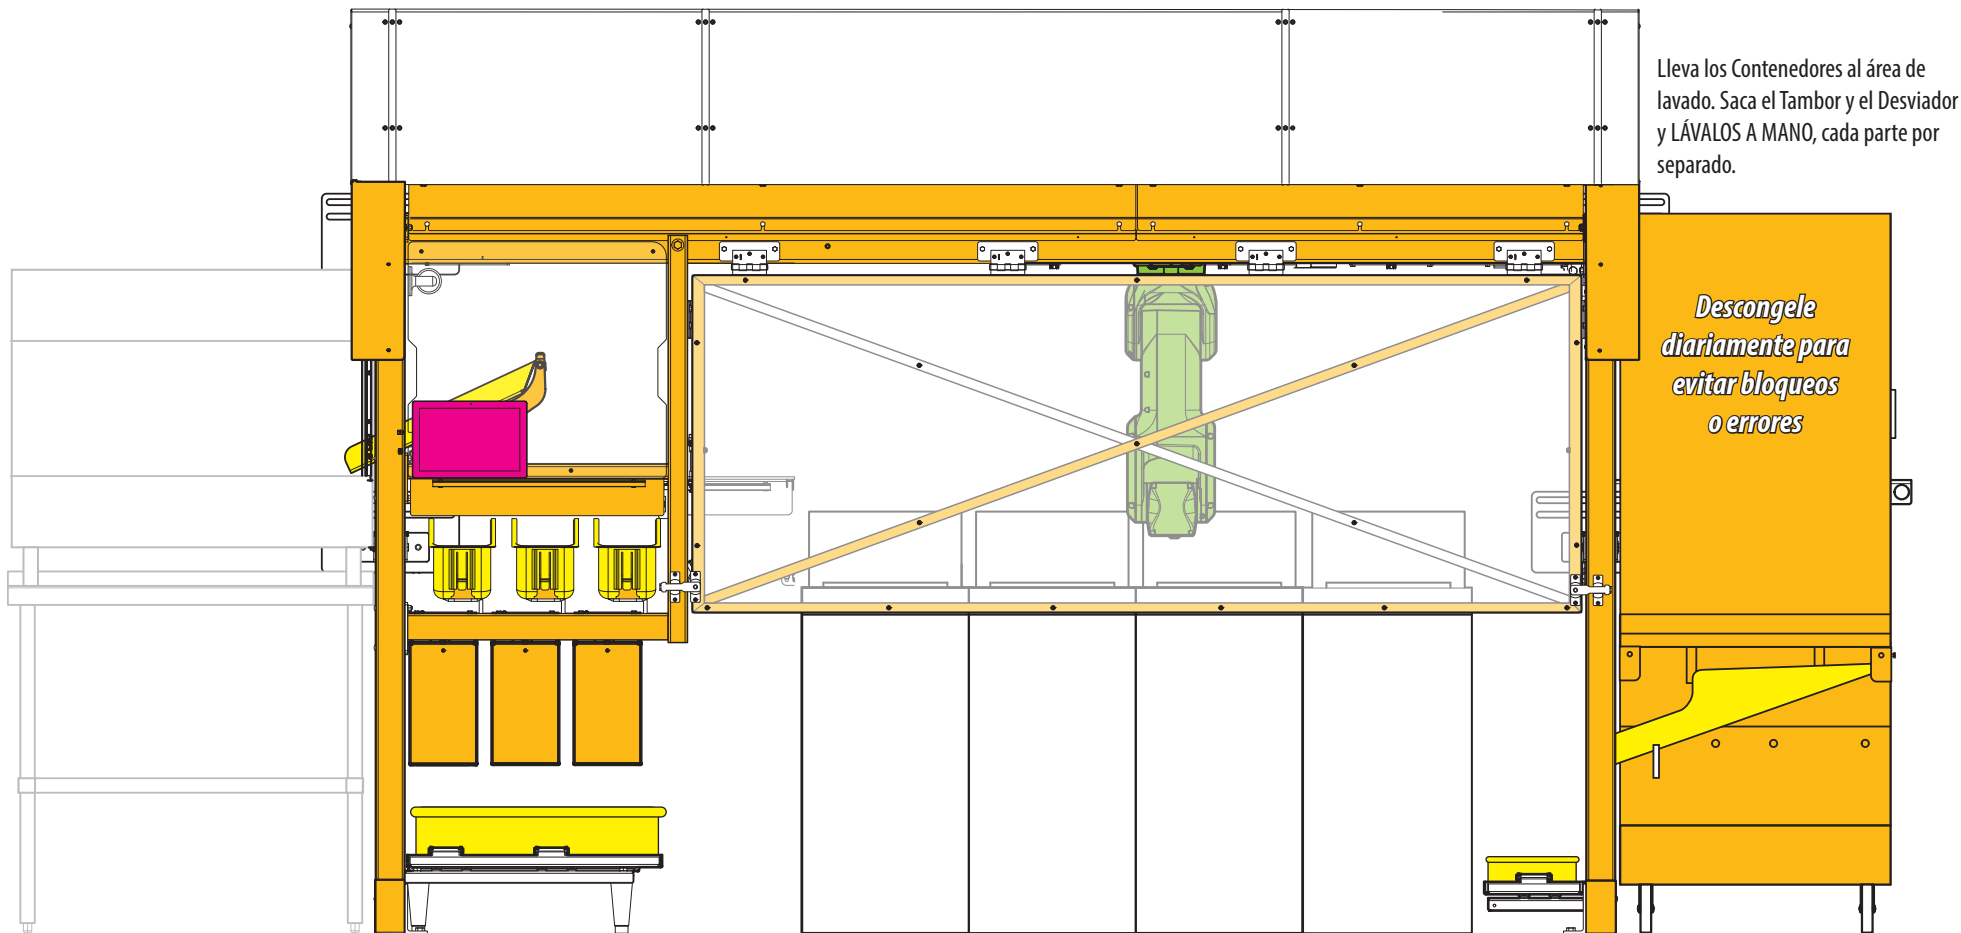

Lleva los Contenedores al área de lavado. Saca el Tambor y el Desviador y LÁVALOS A MANO, cada parte por separado.

Descongele diariamente para evitar bloqueos o errores

Diario – Limpie en el Lavado

Limpie por separado en una solución de agua caliente y detergente.

Enjuague con agua limpia. Desinfecte.

Componentes Internos del Dispensador
(consulte la tarjeta de instrucciones del dispensador)

Conducto del Dispensador
AutoBins

Canal de Mantenimiento Caliente
Canasta de Freidora

Charola de Captuera del Dispensador
Charola de Captuera del AutoBin

Diario – Limpieza

Limpie con agua y solución de detergente. Enjuague con agua limpia. Desinfecte.

Estructura y Barreras
Exterior del Dispensador
Área de Canastas Especial
Marcadores de Canastas

¡No utilice materiales o limpiadores abrasivos!


Barrera Transparente

Limpia con agua y solución de detergente. NO USES LIQUIDO DE LIMPIE VIDRIOS.



Manga del Brazo Robótico

A DIARIO – Limpie utilizando una solución de agua y detergente. Aplique el spray desinfectante de superficies.

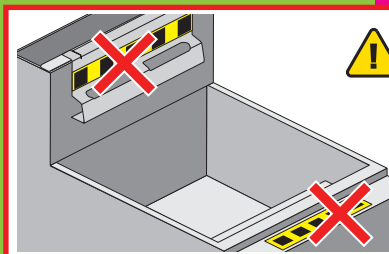

Tableta

CUANDO SEA NECESARIO
Utilice SOLAMENTE las toallitas y el paño de limpieza proporcionados.



IMPORTANT! No utilice abrasivos en los marcadores freidoras o canastas!

Freidoras y Mantenimiento Caliente

Limpie de acuerdo con el Procedimiento Operativo Estándar de su lugar.

